




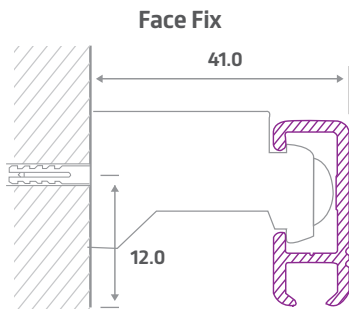

5600W Hand Drawn Window Track:

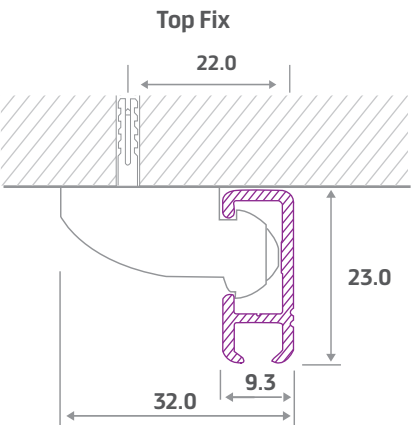

(Optional extension bracket - 80mm)

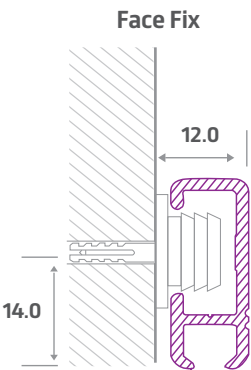



5600W Hand Drawn Window Track:

1. Unpack the track and brackets.
 2. If the track is top fix, go to point 4. If it is face fix go to point 5.
 3. For top fix, locate the brackets onto the track at 600mm spacing, ensuring that there are no brackets further than 100mm in from either end. Lift the track into its desired position and fix it in place using the appropriate screws.
 4. Fix the face fix brackets in position, ensuring the brackets are spaced no more than 600mm apart and that there is a bracket no further than 100mm in from either end. Lift the track up and click it onto the brackets.
 5. Check gliders move freely within profile.
- NB. Large curtain tracks are heavy and it is important that the correct fixings are used. If unsure, seek expert advice.

